

OPERATOR'S
INSTRUCTION
BOOK

CINCINNATI No. 2
CUTTER and TOOL GRINDER




*Place this Booklet in the
Hands of the Machine
Operator or Set-Up Man*

CINCINNATI MILLING MACHINES, LTD.
WOODLANDS FARM ROAD . . . TYBURN
BIRMINGHAM, ENGLAND

N. H. Earne
TOOL ROOM

ANY CUTTER can be sharpened and still produce as good a finish and as true a form as a new cutter. In fact, new cutters of the type which are sharpened by grinding the periphery of the teeth should not be used until they are ground to the proper clearance angle for the material to be machined.

This booklet gives, in a condensed form, tables and data which are necessary to set up and grind all the ordinary types of milling cutters on the No. 2 CINCINNATI Cutter Grinder. Of course, a wide variety of small tool room work can also be economically and accurately ground with the aid of the standard attachments. Detail instructions for the operation, lubrication and adjustment of the machine are given to help the new operator to understand more fully the operation and care of his machine.

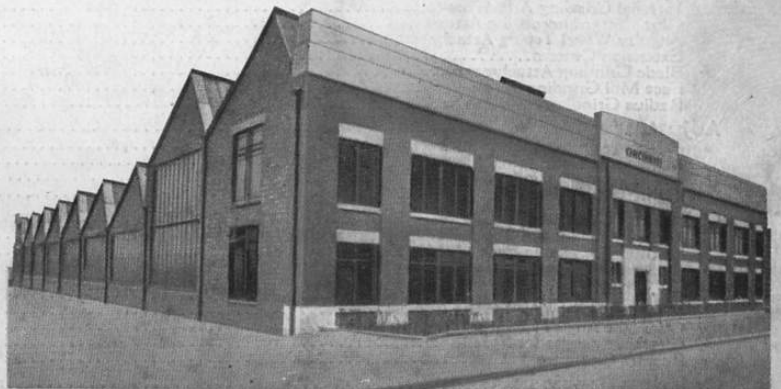

CONTENTS

	Page
Machine Specifications	
Lubrication	4-5
Chart	4
Specifications	5
Operation of Machine	6-11
Operating Features	6
Starting	7
Table Feed	7
Cross Feed	7
Vertical Feed	7
Swiveling the Wheel Head	7
Setting Up the Tailstock or Work Head	7-8
Spindle and Wheel Speeds	8
Wet vs. Dry Grinding	8
Truing the Wheel	9
Grinding Wheels	9-10-11
Direction of Rotation of Wheel	11-12
Safety Precautions	12-13
Protective Hoods	12
Flanges, Washers and Nuts	12
Inspection and Storage of Wheels	12
Operating Rules and General Data	13
Clearance Angles for Milling Cutters	14-16
Grinding Cutters	16-36
Grinding a Spiral Mill	17-18
Grinding a Spiral End or Shell End Mill	19-21
Grinding a Small End Mill	21
Grinding a Keyway or Slotting Cutter	22
Grinding a Side Milling Cutter	22
Grinding a Stagger Tooth Cutter	22-23
Grinding an Angular Cutter	23
Grinding Small Diameter Face Mills	23
Grinding Small Diameter Metal Cutting Saws	23-24
Grinding Large Diameter Metal Cutting Saws	24-25
Grinding the End Teeth of Long End Mill	25
Grinding a Helical Cutter	26-27
Grinding a Tap	27-28
Grinding a Hob	28-29
Grinding a Reamer	29-36
Hand Reamers	30-33
Grinding a Hand Reamer for Steel	31-32
Grinding a Hand Reamer for Cast Iron and Bronze	32
Chucking or Machine Reamers	33-35
Grinding a Chucking Reamer for Steel	33-34
Grinding a Chucking Reamer for Cast Iron	35
Grinding a Chucking Reamer for Bronze	35
Taper Reamers	35-36
Attachments	37-50
Surface Grinding Attachment	37
Cylindrical Grinding Attachment	38
Internal Grinding Attachment	39
Gear Cutter Sharpening Attachment	40-43
Angular Wheel Truing Attachment	44-45
Extension Centres	45
Blade Grinding Attachment	45-46
Face Mill Grinding Attachment	46-49
Radius Grinding Attachment	49-50
Adjustments for Wear	50-52
Adjusting the Headstock (Work Head) Spindle Bearings	50
Replacing the Grinding Wheel Spindle Bearings	51
Replacing the Main Driving Belt	51
Tightening the Belt	52
Grinding Cemented Carbide Blade Milling Cutters	52-62
Method when using Regular Headstock for Grinding 8" Diameter Face Mill	53-57
Method when using Face Mill Grinding Attachment	57-62
Tables	9
Grinding Wheels	15
Clearance Angles for Milling Cutters	27
Clearance Angles for Helical Cutters	62
Clearance Angles for Face Mills	63-64
Reamer Clearance Tables	63-64
Ordering Repair Parts	Inside Back Cover
List of Agents	Cover

LUBRICATION

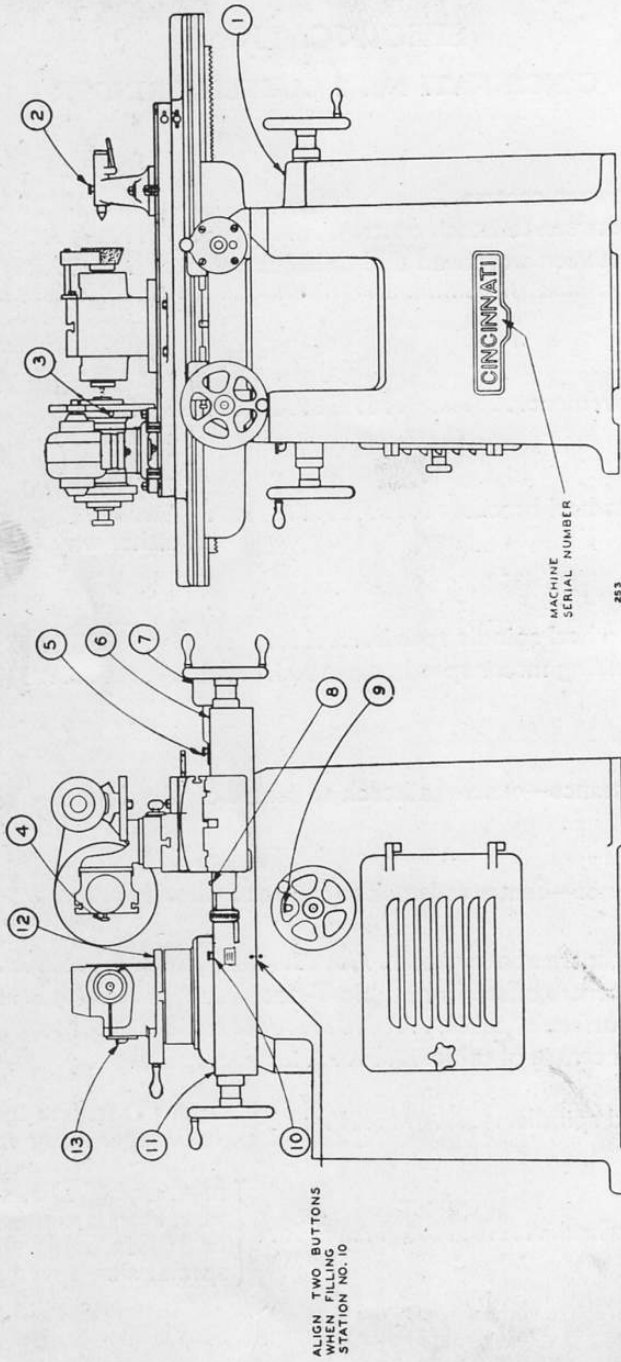


Fig. 1
Lubrication Chart for No. 2 Cincinnati Cutter Grinder

LUBRICATION

TOOL ROOM

LUBRICATING INSTRUCTIONS AND SPECIFICATIONS

When to Oil	Station Number	Parts Lubricated	Instructions	Specifications
Once a Day	1	Elevating Shaft Brg.	Oil from squirt can	Medium machine mineral oil Viscosity 190 to 210 seconds Saybolt at 100° F.
	2	Tailstock	Oil from squirt can	
	3	Work Head Dial	Remove screw and oil from squirt can	
	4	Work Head Spindle	Oil from squirt can	
	5	Differential Shaft Bearings	Oil from squirt can	
	6	Front Cross Screw Brg.	Oil from squirt can	
	7	Differential Gear Bearings	Remove screw and oil from squirt can	
	8	Shaft Bearing	Oil with squirt can	
	9	Elevating Shaft and Worm	Oil from squirt can	
	10	Cross Screw	Oil from squirt can. Align two buttons when oiling.	
	11	Rear Cross Screw Bearing	Oil from squirt can	
	12	Column Bearing in Sleeve	Remove screw and oil from squirt can	
Refill When Necessary	13 (2 cups)	Wheel Head Spindle	Fill oil cups, when spindle is at rest, to top of glass (high oil level). Drain and re-fill every three months. About 1/8 pint required each filling.	High grade spindle oil Viscosity 120 to 130 seconds Saybolt at 100° F.
		Spindle	Adjust to use about one cup of oil each day.	
DRIVING MOTOR IN BASE				
Once a Day		Motor Bearings (two cups)	Keep grease cup filled—one turn daily	Good grade of cup grease without fillers. Min. flow temperature 270° F.

